


Installation Instructions (All Unit Sizes)

CDM-WBM

Wood Bottom-Mount Soft-Close
Trashcan Pullout with Door Brackets

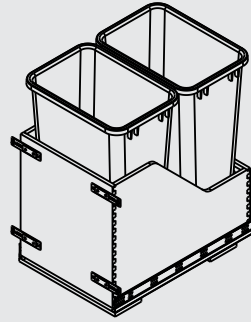

hardware
resources[®]

Scan QR or visit link to
view installation video:
<https://delivr.com/2ytsf>



IMPORTANT:

Before you begin, familiarize yourself with all of the parts and fully read the instructions.

PARTS:

Pre-Assembled Organizer and Base Unit
4 - #8 x 1" Coarse-Thread Wood Screws
4 - #6 x 1/2" Coarse-Thread Screws
4 - 3M™ Double-Sided Foam Tape Squares
8 - #8 x 5/8" Coarse-Thread Screws (21" units only)
2 - Door Joining Brackets (21" units only)

TOOLS NEEDED:

Screw Gun* or Phillips Screwdriver
Measuring Tape or Ruler
Pencil
Level

*NOTE: If screw gun has a clutch, set to lowest setting so as not to over tighten and/or strip screws.

CUSTOMER SERVICE:

Toll-free customer help line available weekdays from 7:00 am to 6:00 pm Central Time at 800-463-0660.

1. Remove cabinet door if necessary



If the cabinet door is attached to the cabinet with hinges, remove the door and hinges to prepare for organizer installation.

2. Separate the organizer from the base



Press the clips under the trash organizer to release pre-installed slides, separating the organizer from the base.

3. Position the base in the cabinet



Place the base unit inside the cabinet. Position it left to right, ensuring proper clearance for hinge or door protrusion.

- Face Frame Applications: Pull the wooden runner to the front of the cabinet until it is tight against the back of the face frame.*
- Frameless Applications: Position the wooden runner with a 3/4" setback from the front of the cabinet.

* For narrow door applications, unit may have to be placed inside and positioned with slides directly behind face frame.

4. Secure the base to the cabinet



Secure the base unit by screwing through the plywood runners (front & back) with the (4) #8 x 1" coarse-thread wood screws provided.

5. Place the organizer onto the secured base



Place the trash organizer onto the undermount slides. Push the unit into the cabinet until you hear the clips lock into place. Move the unit in and out of the cabinet to ensure proper clearances.

5a. Install door mounting brackets

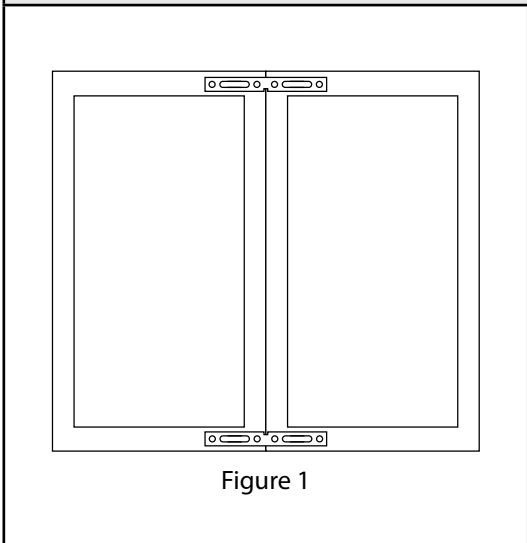


Figure 1

For 21" Trashcan Units: If your cabinet has a single door, skip to step 6. If the cabinet has double doors, proceed with steps a–c.

- a. Lay doors face down on flat surface. If desired, to hide any hinge bore holes, rotate doors 180 degrees so the hinge bore holes are facing inward.
- b. Align doors side by side. Based on preference, either align with door edges touching or gapped to match adjacent doors/drawers.
- c. Use the center notch to center door joining brackets between both doors (see Figure 1). Attach door joining brackets near top and bottom of door frame with provided #8 x 5/8" screws (4 screws per bracket).


Note: Bracket may be shifted up or down to clear face frame and decorative hardware screws (decorative hardware screws may be recessed underneath joining brackets if needed).

6. Attach the cabinet door to the organizer



Adjust door-mounting brackets out to the desired location. Attach 1 square of double-sided foam tape to each door bracket. Close the organizer, visually line up the door and press door firmly against the organizer so that door sticks to tape on brackets. Open organizer and secure brackets with provided #6 x 1/2" screws

7. Adjust the cabinet door

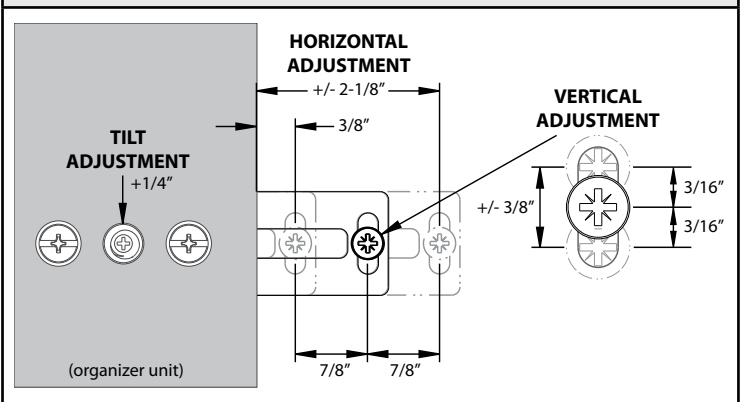

Adjust the position of the cabinet door for proper leveling and spacing. After adjustments are made, firmly tighten all door and bracket screws.

- a. Left/Right: Loosen bracket screws then adjust door.
- b. Up/Down: Loosen door screws then adjust door.
- c. Tilt: Loosen bracket screw and screw the tilt screw outward to achieve the desired angle.